

AX-x00 Alarm and Preset Setup

- Page Preset 1
- Page Preset 2
- Presets 1 – 14
- Alarm function
- DND

Table of Contents

1. About	3
2. Equipment Required	3
3. Presets Summary	3
4. Connecting and Opening the Preset setup window	4
5. Configuring Page Preset 1 (PP1) for contact P1	6
5.1 About PP1	6
5.2 Setting up PP1	6
6. Configuring Presets 1 – 14	10
6.1 About Presets 1 - 14	10
6.2 Setting up a Preset	10
7. Configuring Page Preset 2 (PP2) for contact P2	13
7.1 About PP2	13
7.2 Setting up PP2	13
8. Preset Alarm	17
8.1 About the Alarm function	17
8.2 Setting up the Alarm Function	17
9. DND – Do Not Disturb function	20
9.1 About DND	20
9.2 Setting up DND for PP1	20
9.3 Setting up DND for PP2	22
10. Uploading Sounds	203
Change Summary	234

AX-x00 Alarm and Preset Setup

1. About

This document explains how to setup the Preset and Alarm functions on AX-x00 Amplifiers using Axiom Design Portal.

2. Equipment Required

- Axiom AX-800-DAV or AX-400-DA
- Computer running Axiom Design Portal
- Network connection or USB cable

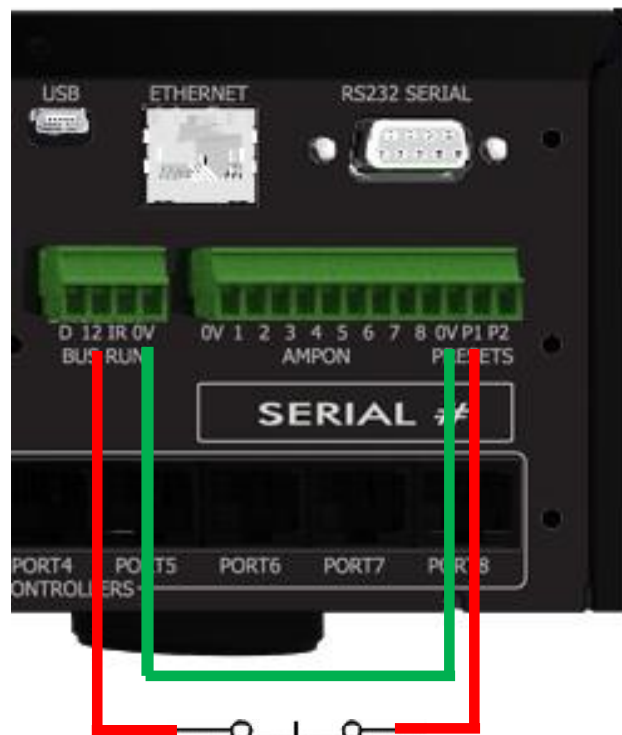
3. Presets Summary

Presets can be configured to affect either all zones or selected zones.

There are fifteen presets in total. Preset 1 – Preset 14 and one dedicated Page Preset which is used by the P1 terminal on the AX-800-DAV / AX-400-DA rear panel. The P2 terminal can use any one of the fifteen presets.

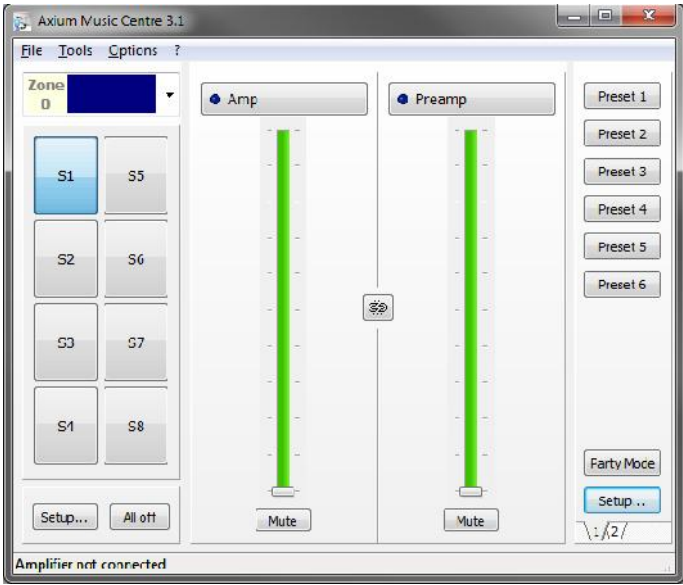
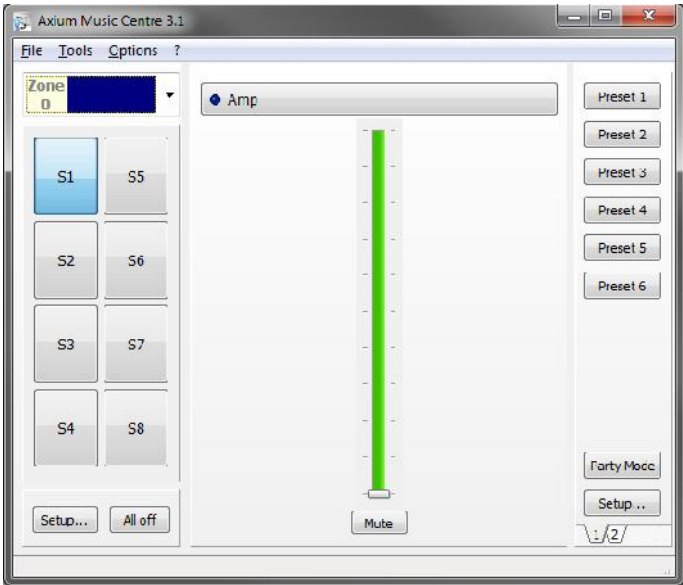
The contact closure is **normally closed**, the trigger is made by **removing** the 12v.

The preset definitions are stored in the multi-zone amplifiers and setup using either Axiom Design Portal, the front panel of the amplifier or the KPC Applet

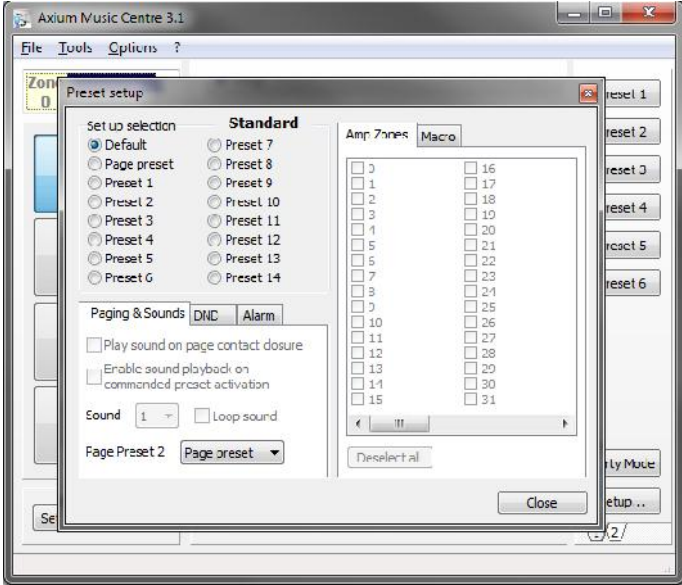


AX-x00 Alarm and Preset Setup

4. Connecting and Opening the Preset setup window

Step	Description
1	<p>Open Axiom Music Centre within the Axiom Design Portal Software.</p> 
2	<p>Connect your AX-x00 amplifier to your computer using either a USB</p>
3	<p>Once connected AMCs appearance will change to match the connected AX-x00 feature base</p> 
4	<p>Click the Setup button in the presets area</p>

AX-x00 Alarm and Preset Setup

Step	Description
5	<p>The Preset setup window will open. This window must stay open during setup</p> 
6	

AX-x00 Alarm and Preset Setup

5. Configuring Page Preset 1 (PP1) for contact P1

5.1 About PP1

Page Preset 1 (PP1) can be triggered a number of ways:

- using the rear contact closure (P1)
- using an external RS232 command
- using the Axiom keypad to send a preset command.

In most cases it will be the P1 Contact.

PP1 affects all zones. Each zone must be configured to turn On or Off and select a source.

PP1 is classified as a “temporary setting”. The AX-x00 will revert back to default settings when the P1 contact is deactivated/released or after a maximum of 30 seconds.

DND (Do not disturb) can be used with PP1 to select a different preset during a user selected timeframe.

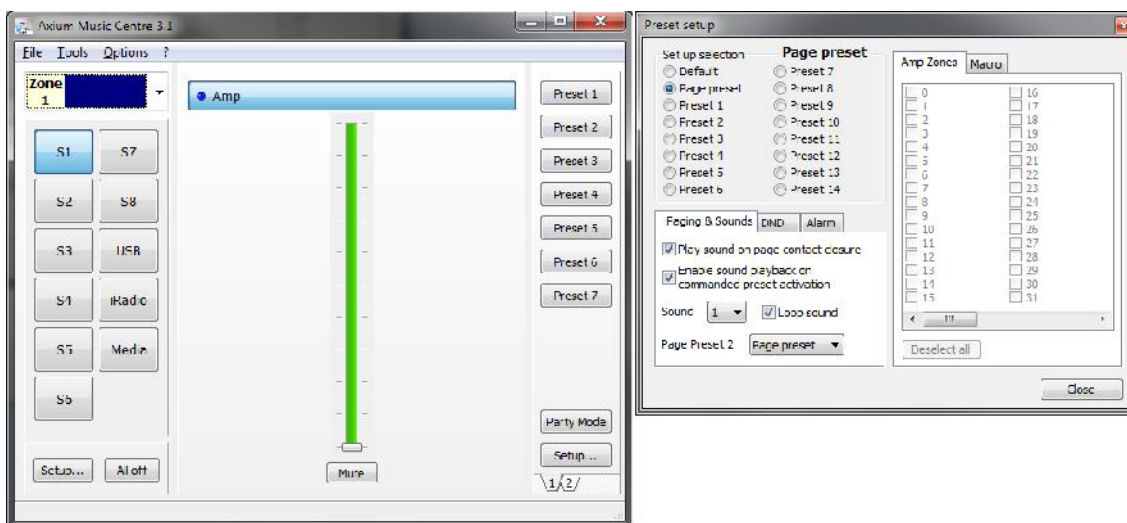
For example, between 11pm and 5am DND could be activated to only play the sound of the doorbell in the master bedroom at a reduced volume.

DND can be setup in a number of ways:

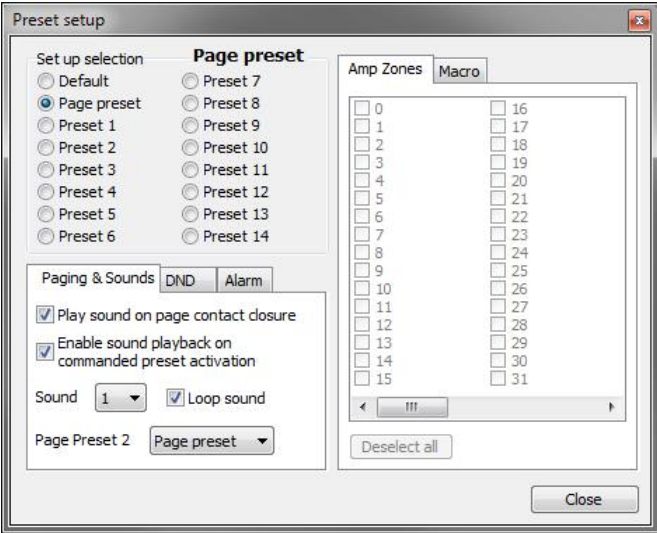
- Using the front panel of the AX-x00
- Using an applet on the Axiom KPC keypad
- Using Axiom Design Portal

5.2 Setting up PP1

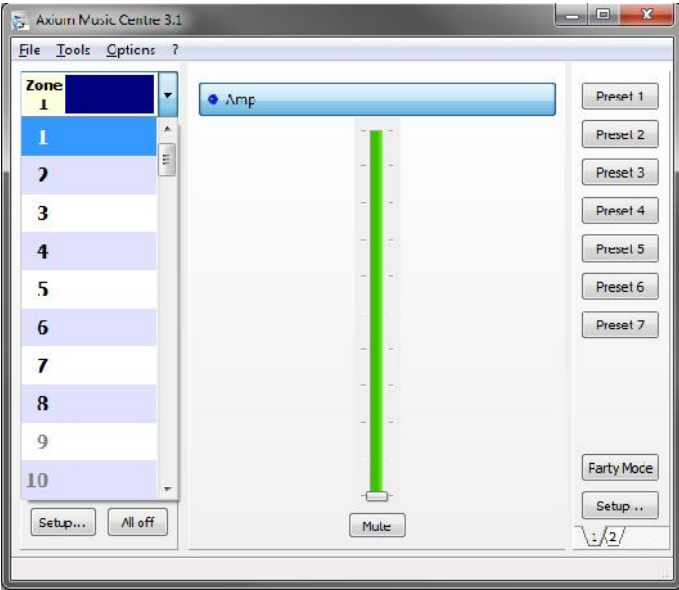
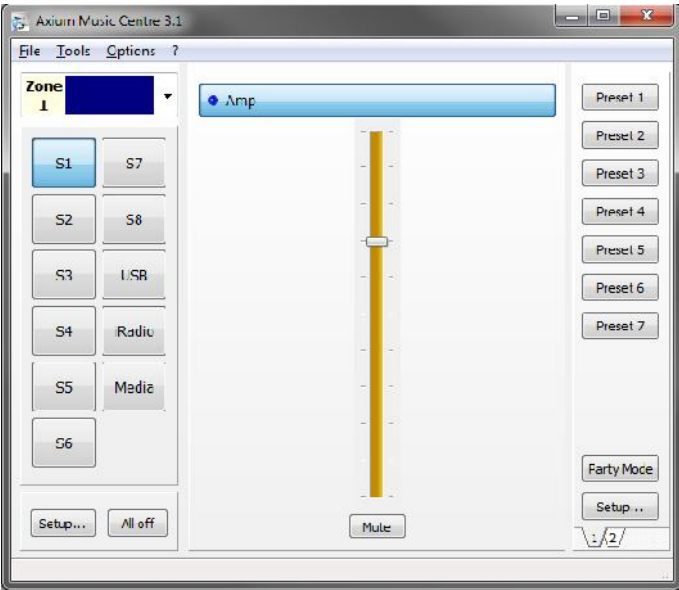
Open the **Preset setup** window as described in section 4 and drag it to the side of the screen



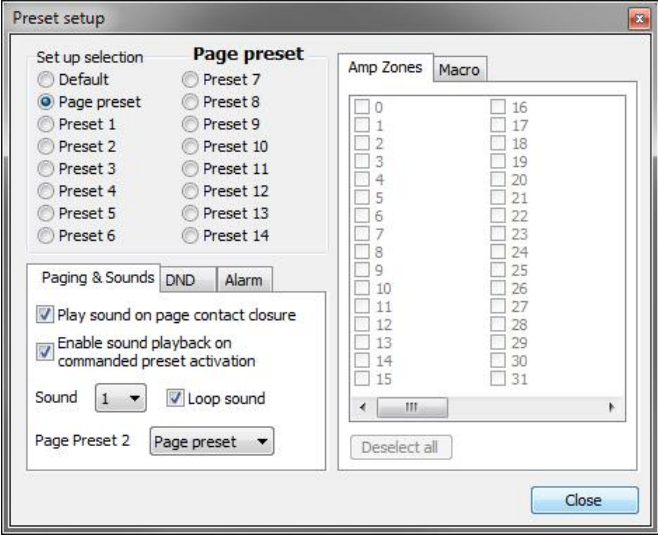
AX-x00 Alarm and Preset Setup

Step	Description
1	<p>Select the Page preset radio button</p> <p><i>This is the preset that is triggered when the P1 contact closure on the back of the AX-x00 is triggered</i></p>
2	<p>Tick the checkbox Play sound on page contact closure</p> <p><i>This tells the AX-x00 to play a stored sound file</i></p>
3	<p>Optional – Tick the check box Enable sound playback on commanded preset action to trigger this preset from an external source. For example an RS232 command or a button programmed on the keypad</p>
4	<p>Select the Sound file position (1-4) from the dropdown menu.</p> <p>If required tick the checkbox Loop sound to loop the file when the contact is held open.</p> <p><i>The contact can be held open indefinitely but the preset will only trigger for a maximum of 30sec. After 30sec the AX-x00 will default back to the last settings</i></p> 
	<p>Return to the main window of AMC making sure the Preset setup <u>window remains open</u>.</p>

AX-x00 Alarm and Preset Setup

Step	Description
5	<p>Using the dropdown list at the top of the Main Window select Zone 1</p> 
6	<p>Select whether to turn the selected Zone On or Off by clicking the Amp Standby Button/Bar</p>
7	<p>Set the desired Volume level or set the Zone to Mute</p> 
8	<p>Select a source from the main window.</p> <p>Note: Source is not required when playing a stored audio file. The AX-x00 will automatically play the sound file when the Page Preset is triggered.</p> <p><i>If a source other than Media is selected, the selected source will play once the audio file ends (if shorter than 30sec) and the trigger has been held open. This is not required for most installations.</i></p>
9	<p>Repeat steps 6 to 9 for each zone to be controlled by this preset.</p> <p><i>It is important to do each zone as the preset will memorise all settings for each of the zones</i></p>

AX-x00 Alarm and Preset Setup

Step	Description
10	<p>Once all zones have been setup click the Close button in the Preset setup window</p> <p><i>The settings will be sent to the AX-x00 automatically when the window closes</i></p>  <p>The screenshot shows the 'Preset setup' window. On the left, under 'Set up selection', 'Page preset' is selected. Below it, 'Paging & Sounds' is active, showing checkboxes for 'Play sound on page contact closure' and 'Enable sound playback on commanded preset activation', both checked. A 'Sound' dropdown is set to '1' and 'Loop sound' is checked. At the bottom left, 'Page Preset 2' is selected. On the right, the 'Amp Zones' tab is active, displaying a list of 32 checkboxes numbered 0 to 31. A 'Deselect all' button is at the bottom of the list. A 'Close' button is at the bottom right of the window.</p>

AX-x00 Alarm and Preset Setup

6. Configuring Presets 1 – 14

6.1 About Presets 1 - 14

Preset 1 - 14 can be triggered a number of ways:

- using the rear contact closure (P2)
- using an external RS232 command
- using an Axium keypad to send a preset command
- Using Axium Design Portal

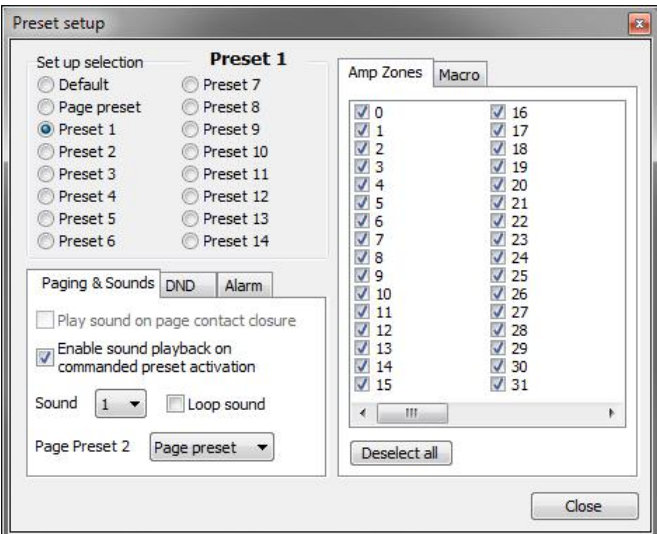
In most cases it will be an Axium keypad sending a preset command.

Presets affect all zones. Each zone must be configured to turn On or Off and select a source.

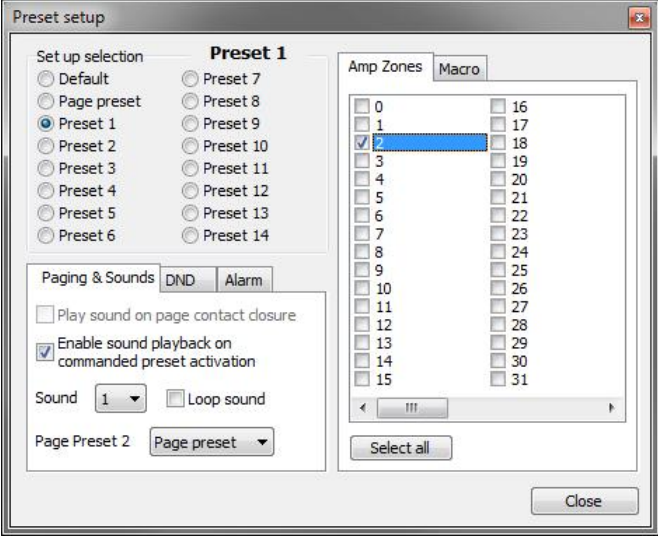
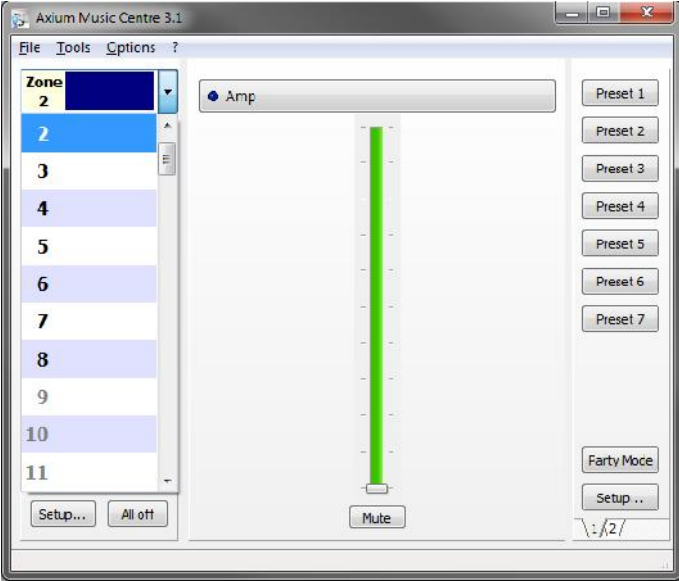
Presets are classified as a “permanent setting” or “not based on time”. The AX-x00 will only change when commanded to. E.G. another preset is sent or a zone is controlled from a keypad.

6.2 Setting up a Preset

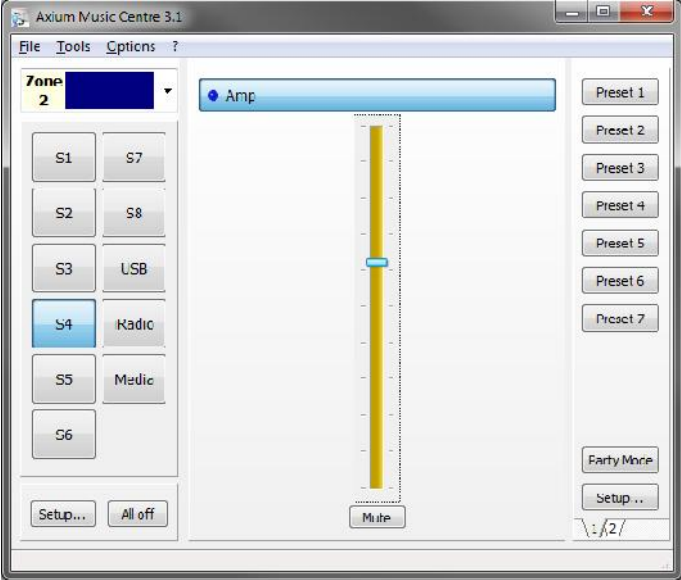
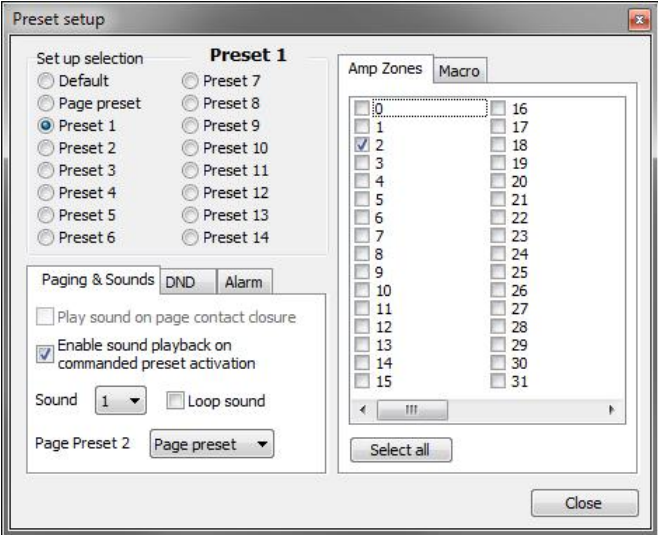
Open the **Preset setup** window as described in section 4

Step	Description
1.	<div>Select the radio button next to the Preset number (1-14) that you wish to setup</div> <div></div>

AX-x00 Alarm and Preset Setup

Step	Description
2.	<p>In the Amp Zones tab select the zones you want this preset to control.</p> <p>By default all zones will be selected. Use the deselect all button to remove the ticks and select the required zones</p> <p><i>In this example Zone 2 has been selected. All other zones will remain as they are (not controlled) when the preset is triggered.</i></p> 
3.	Return to the main window of AMC making sure the Preset setup window remains open.
4.	<p>Using the dropdown list at the top select the zone you want to setup. Making sure to setup each zone that you selected in the Preset Setup window</p> <p><i>In this example Zone 2 has been selected</i></p> 
5.	Select whether to turn the Zone On or Off by clicking the Amp Standby Button/Bar
6.	Set the desired Volume level or set the Zone to Mute

AX-x00 Alarm and Preset Setup

Step	Description
7.	<p>Select a source from the main window</p> 
8.	<p>Repeat steps 5 to 7 for all zones selected in the preset setup window</p>
9.	<p>When all zones are complete return to the Preset setup window and click Close</p> 

7. Configuring Page Preset 2 (PP2) for contact P2

7.1 About PP2

PP2 can be triggered a number of ways:

- via the rear contact closure (P2)
- via an external RS232 command
- using an Axiom keypad to send a preset command.

In most cases it will be with the P2 Contact.

If PP2 is configured as **Page preset** (Default setting) it will mimic PP1. However, the true strength of PP2 is that it can be fully customised to only control certain zones. This is done by setting it to a “Preset number”.

As with PP1 this is a temporary setting. The AX-x00 will revert back to default settings when the P2 contact is deactivated/released or after a maximum of 30 seconds.

DND (Do not disturb) can be used with PP2 to select a different preset during a user selected timeframe.

For example between 11pm and 5am DND could be activated to only play the sound of the doorbell in the master bedroom at a reduced volume.

DND can be setup in a number of ways:

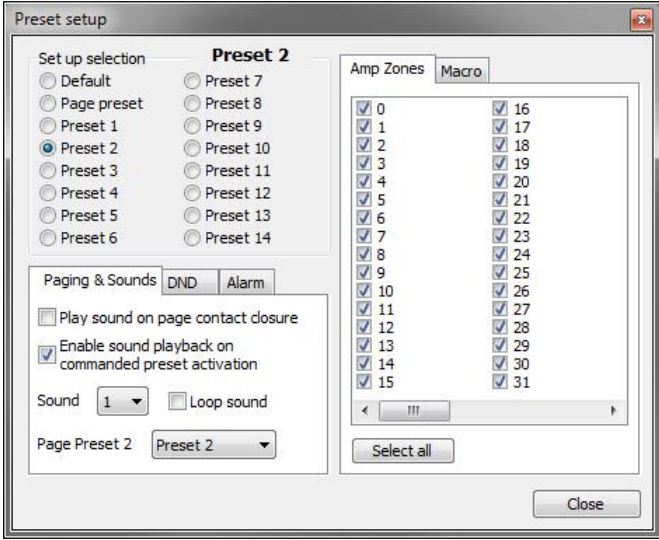
- Using the front panel of the AX-x00
- Using an applet on the Axiom KPC keypad
- Using Axiom Design Portal

7.2 Setting up PP2

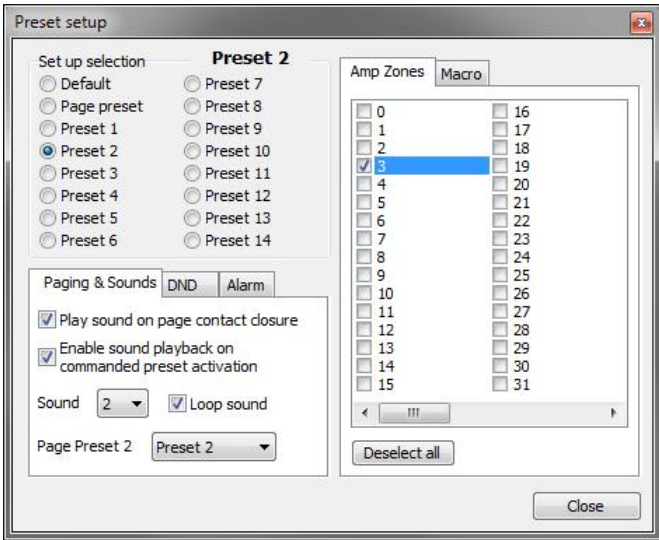
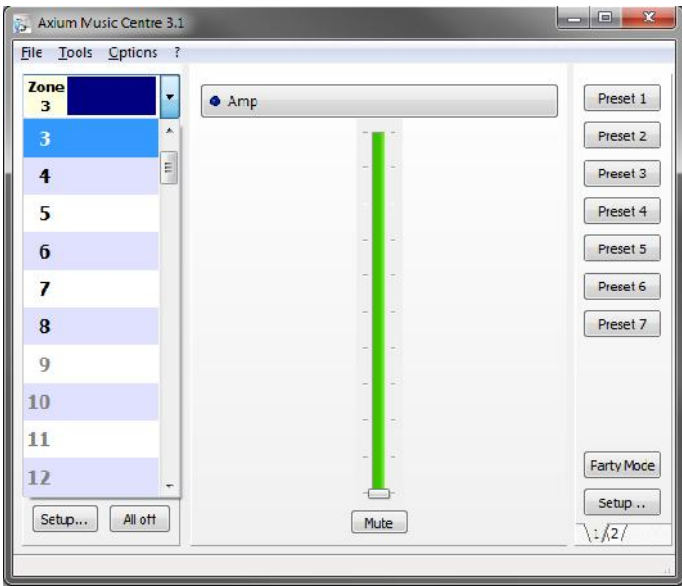
Open the **Preset setup** window as described in section 4

Step	Description
1	Select the radio button next to a Preset number <i>This is the preset that is triggered when the P2 contact closure on the back of the AX-x00 is triggered</i>

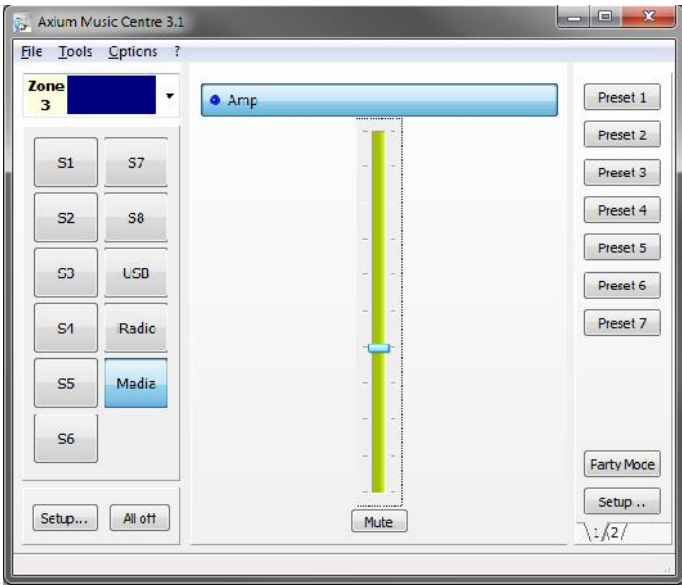
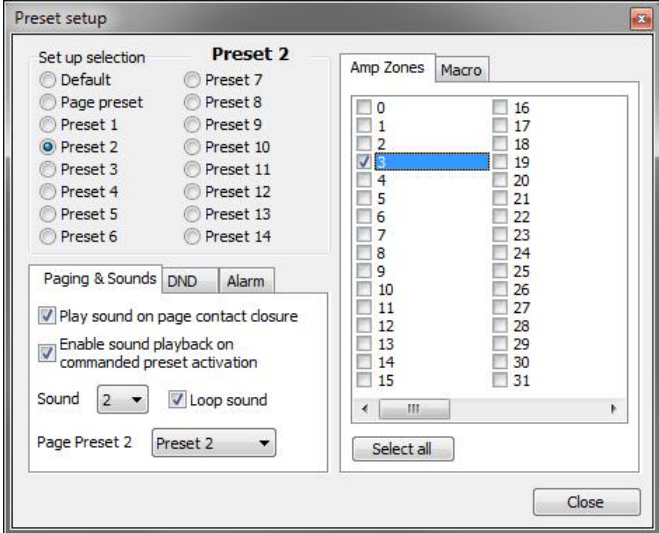
AX-x00 Alarm and Preset Setup

Step	Description
2	<p>Select the same Preset number used in step 1 from the Page Preset 2 dropdown menu</p> 
3	<p>Tick the check box Play sound on page contact closure.</p> <p><i>This tells the AX-x00 to play a stored sound file</i></p>
4	<p>Optional – Tick the check box Enable sound playback on commanded preset action to trigger this preset from an external source. For example an external RS232 command or a button programmed on the keypad</p>
5	<p>Select the Sound file position (1-4) from the dropdown menu.</p> <p>If required tick the checkbox Loop sound to loop the file when the contact is held open.</p> <p><i>The contact can be held open indefinitely but the preset will only trigger for a maximum of 30sec. After that the AX-x00 will default back to the last settings</i></p>

AX-x00 Alarm and Preset Setup

Step	Description
6	<p>In the Amp Zones tab select the zones you want this preset to control.</p> <p>By default all zones will be selected. Use the deselect all button to remove the ticks and select the required zones.</p> <p><i>In this example Zone 3 has been selected. All other zones will remain as they are (not controlled when the preset is triggered).</i></p> 
7	<p>Return to the main window of AMC making sure the Preset setup window remains open.</p>
8	<p>Using the dropdown list at the top select the zone you want to setup. Making sure to setup each zone that you selected in the Preset Setup window</p> <p><i>In this example Zone 3 has been selected</i></p> 
9	<p>Select whether to turn the Zone On or Off by clicking the Amp Standby Button/Bar</p>
10	<p>Select the source you want to activate</p> <p><i>This is only required if the Zone is set On</i></p>

AX-x00 Alarm and Preset Setup

Step	Description
11	<p>Select the volume for the zone or mute if required</p> 
12	Repeat steps 8 to 11 for all zones selected in the preset setup window
13	When all zones are complete return to the Preset setup window and click Close
	

AX-x00 Alarm and Preset Setup

8. Preset Alarm

8.1 About the Alarm function

The **Alarm** function cannot be triggered. It is either Enabled or Disabled in Axiom Design Portal or the front panel of the AX-x00.

In most cases it will be setup with Axiom Design Portal

Normally people think of an alarm as something that starts beeping at a particular time.

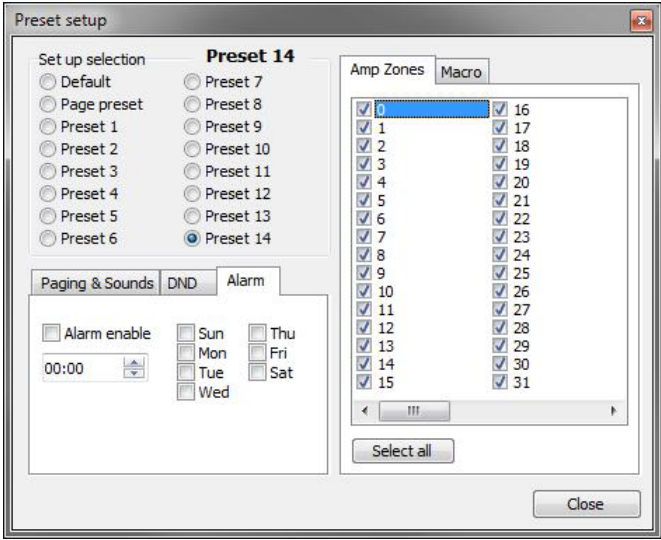
The Axiom Alarm function can be as simple as that or much more sophisticated; It allows you to trigger a preset, that preset can be configured to turn any zone on or off, set a volume and select a source.

For example at 6:35am every Monday and Thursday, turn on Zone 5, select Source 2 and set the volume to 32%.

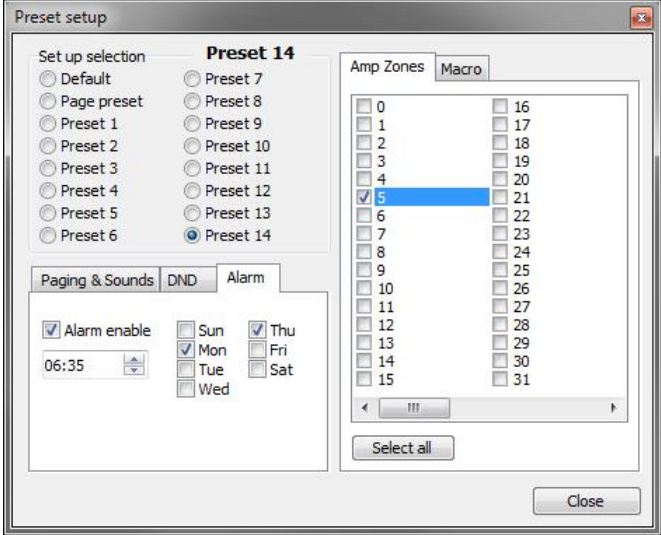
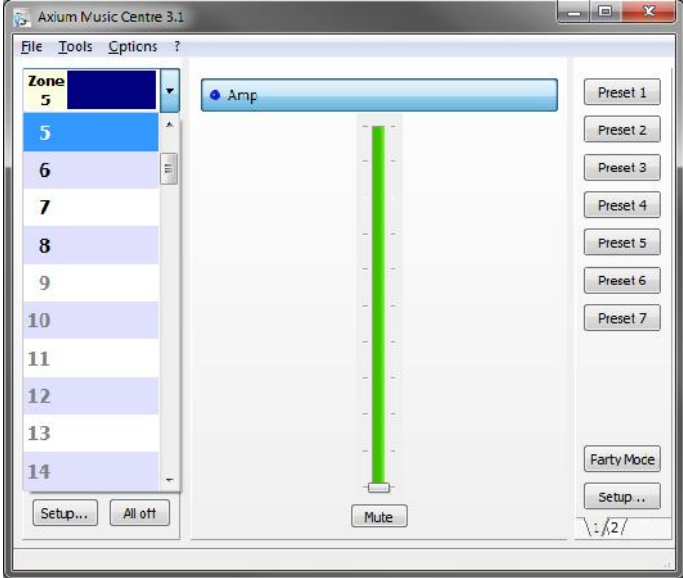
As with all presets the alarm is a “permanent setting” or “not based on time”. The AX-x00 will only change when commanded to. E.G. another preset is sent or a zone is controlled from a keypad.

8.2 Setting up the Alarm Function

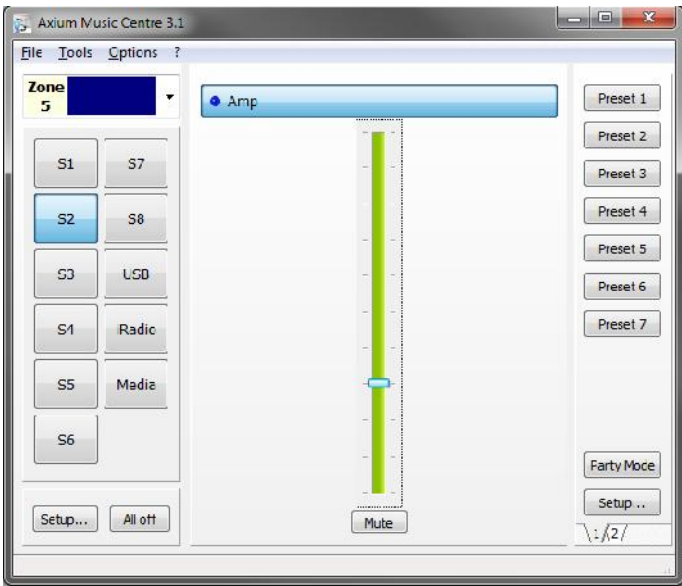
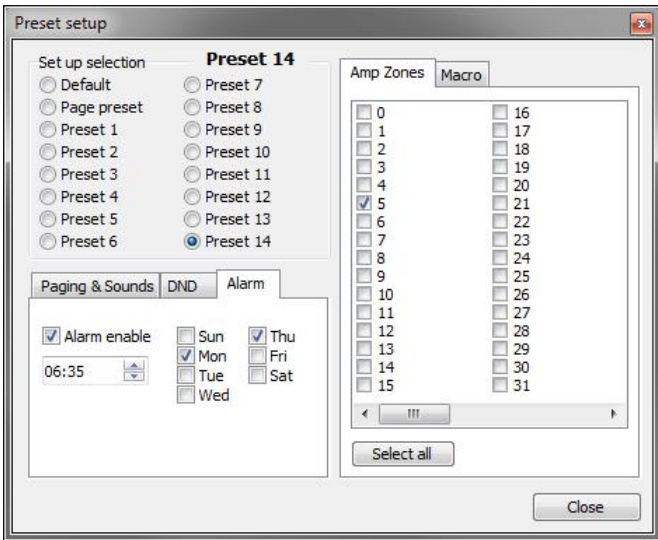
Open the **Preset setup** window as described in section 4

Step	Description
1	<p>Select the radio button next a Preset number and then select the Alarm tab.</p> <p><i>In this example Preset 14 has been selected</i></p> 
2	Tick the Alarm Enable checkbox to turn the alarm function on
3	Set the time and the day(s) of the week the alarm is required

AX-x00 Alarm and Preset Setup

Step	Description
4	<p>In the Amp Zones tab select the zones you want this preset to control.</p> <p>By default all zones will be selected. Use the deselect all button to remove the ticks and select the required zones.</p> <p><i>In this example Zone 5 has been selected. . All other zones will remain as they are (not controlled when the preset is triggered).</i></p> 
5	<p>Return to the main window of AMC making sure the Preset setup <u>window remains open</u></p>
6	<p>Using the dropdown list at the top select the zone you want to setup</p> <p><i>In this example Zone 5 has been selected</i></p> 

AX-x00 Alarm and Preset Setup

Step	Description
7	<p>Select whether to turn the Zone On or Off by clicking the Amp Standby Button/Bar</p> 
8	<p>Select the source you want to activate</p> <p><i>This is only required if the Zone is set On</i></p>
9	Select the volume for the zone or mute if required
10	Repeat steps 6 to 9 for all zones selected in the Preset setup window
11	<p>When all zones are complete return to the Preset setup window and click Close</p> 

AX-x00 Alarm and Preset Setup

9. DND – Do Not Disturb function

9.1 About DND

The DND function allows a page preset to be used to overwrite any current settings during a specified time window. DND can be used with PP1, PP2 only.

DND affects all zones that have been programmed into the selected preset.

DND is classified as a “temporary setting”. The AX-x00 will revert back to its previous settings when the DND timer has ended.

For example, between 11pm and 5am DND could be activated to only play the sound of the doorbell in the master bedroom at a reduced volume.

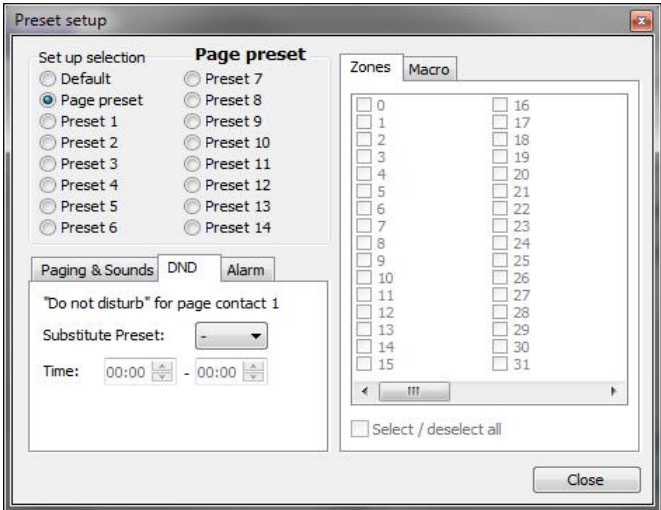
This is achieved by programming a preset to the above requirements and simply enabling the DND function between 11pm and 5am.

DND can be setup in a number of ways:

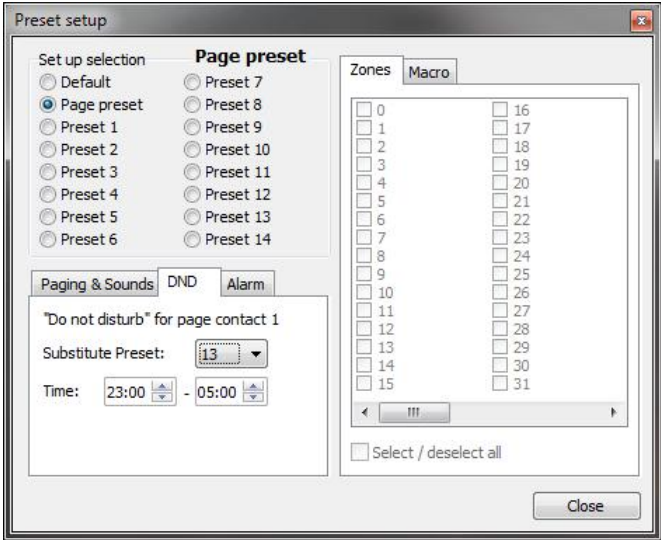
- Using the front panel of the AX-x00
- Using an applet on the Axiom KPC keypad
- Using Axiom Design Portal

9.2 Setting up DND for PP1

Open the **Preset setup** window as described in section 4

Step	Description
1	<p>Select the radio button next the Page Preset and then select the DND Tab</p> 

AX-x00 Alarm and Preset Setup

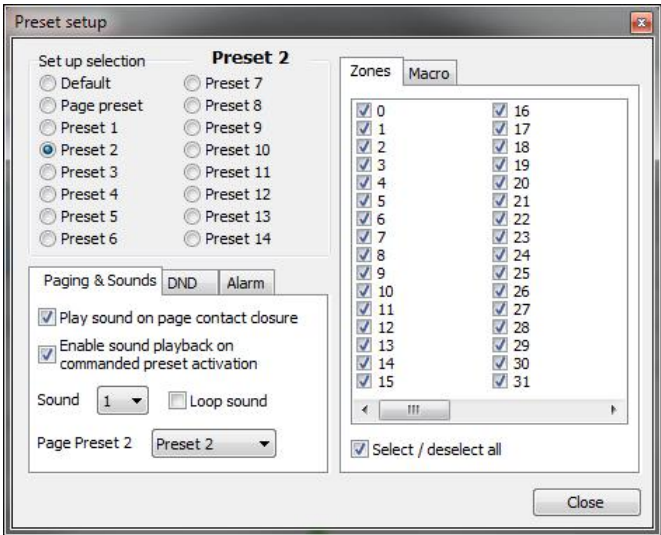
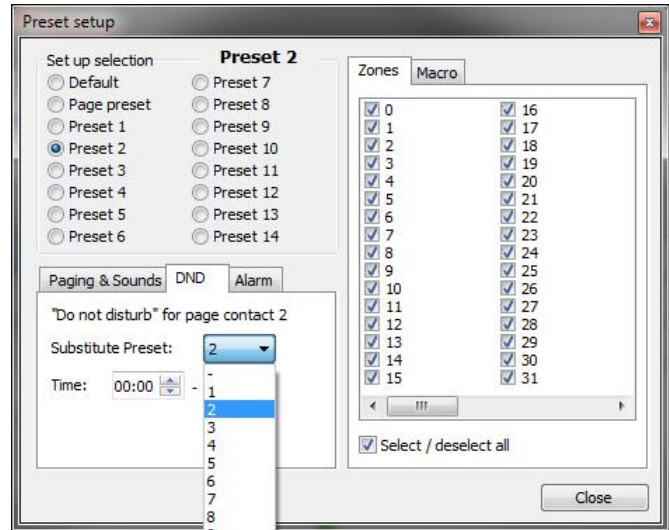
Step	Description
2	<p>Using the drop down box select the Substitute Preset Number that matches the Preset Number</p> <p><i>In this example Preset 13 has been selected to trigger between 11pm and 5am</i></p> <p>Note: The DND tab title will show “Do not disturb” for page contact 1. This indicates you are changing the preset for PP1</p> 
3	Set the required start and the stop time for the DND function
4	Click Close when finished

AX-x00 Alarm and Preset Setup

9.3 Setting up DND for PP2

Open the **Preset setup** window as described in section 4

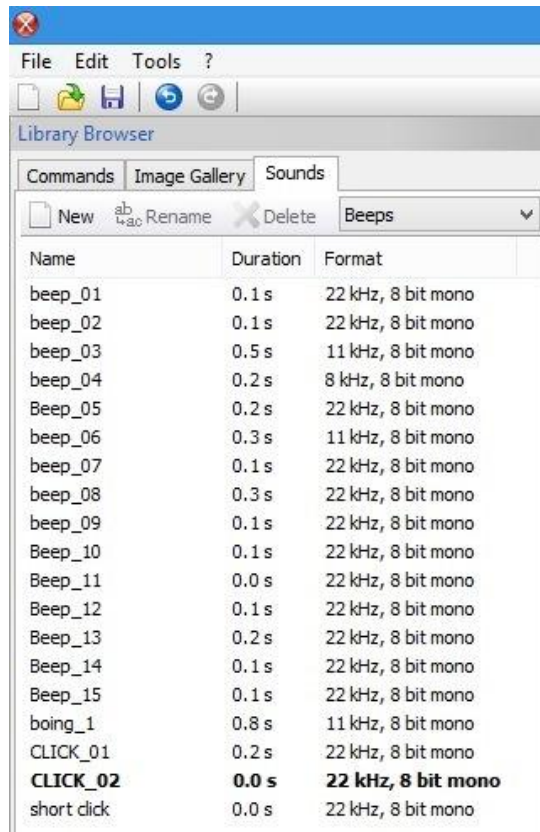
Complete the PP2 setup as described in section 7

Step	Description
1	<p>Select the radio button next the Preset that has been assigned to Page Preset 2</p> <p><i>In this example Preset 2 has been selected for PP2.</i></p> 
2	<p>Select the DND tab. Using the drop down box select the Substitute Preset Number that matches the Preset Number</p> <p>Note: The DND tab title will change to “Do not disturb” for page contact 2. This indicates you are changing the preset for PP2</p> 
3	Set the start time and the stop time that the DND is required
4	Click the Close button when finished

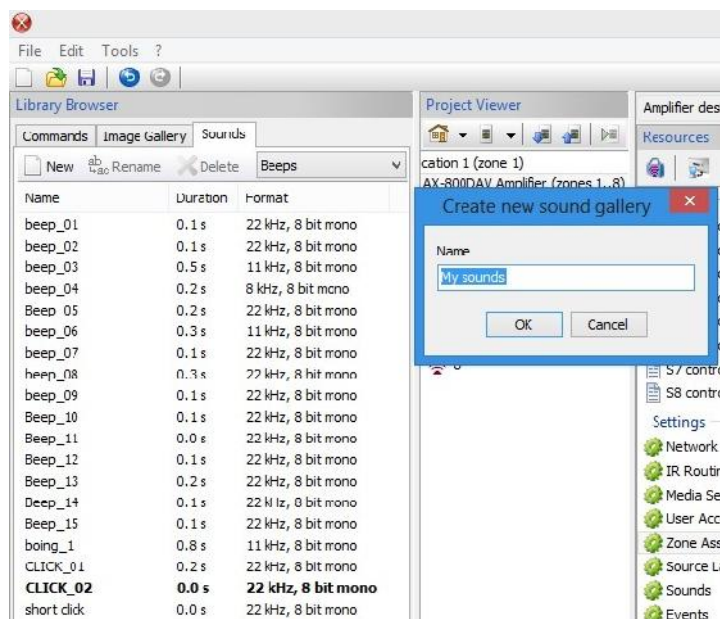
AX-x00 Alarm and Preset Setup

10. Uploading sounds

Select the **Sound tab** in the library browser in ADP




Select New to create a new folder



In the Create new sound gallery box, name your folder then click **OK**

AX-x00 Alarm and Preset Setup

4	<p>You will now have two sound folders to choose from, Beeps and My Sounds (or the name you have given the folder)</p> 
5	<p>Select the renamed folder from the drop down box</p>

Change Summary

Version	Description of Change	Author	Date
001	Initial Document		October 2013

END OF DOCUMENT